 





 

 





 







 







 

 

 









 















 

 

 







Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Sleep	 Sleep / Timer	 Back	 Back / Return
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 Source	 AV / Input / RDS	 CH-	 CH- / Page-
 1	 1	 Up	 Up
 2	 2	 CH+	 CH+ / Page+
 3	 3	 Left	 Left
 Audio/Lang	 Audio / Lang I/II	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Vol-	 Vol-
 6	 6	 Down	 Down
 Tv/Radio	 TV/Radio /	 Vol+	 Vol+
 7	 7	 Setup	 Setup / OPT /
 8	 8	 Play/Timeshift	 Play / Slow
 9	 9	 Pause	 Pause / Step / Freeze
 Exit	 Exit / Cancel / Clear	 Stop	 Stop / Hold
 CH.List	 Smart / List	 Eject	 Eject / Surround

Original	Replacement	Original	Replacement
 Power	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP - FREEZE	 HOLD	 REC MODE
 Play	 Pause	 Stop	
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	
 HOME	 ANGLE		
 MENU	 OK	 INFO	
 CLEAR	 EXIT	 RETURN	
 CANCEL	 LIST	 BACK	
 VOL+	 SMART	 CH PAGE	
 VOL-	 MEDIA		
 TV	 DISPLAY		
 DVD			
 CD - STB			
 1	 2	 3	
 VIDEO	 TAPE	 TUNER	
4	5	6	
AUX - HDD	USB	BLUETOOTH	
7	HDMI - BAT	PC	
GUIDE EPG	0	FAV MARKER	
NETFLIX	APP	YouTube	Prime Video
SEARCH	REPEAT	REPEAT A-B	RANDOM
 www.mandis.tv			





Original	Replacement
Rec	Rec / Rec Mode
Text	Text / Goto
<<	<< / Tune-
>>/Reveal	>> / Tune+
I<</Hold	I<< / Preset-
>>I/Sub.P	>>I / Preset+
SUB.T	Subtitle / EQ
Index/Title	Shift + Sound / Title
Size/Zoom	Zoom / Size
D.Menu	D.Menu / Top
EPG	Guide / EPG / -/--
FAV/Prog	Fav / Marker / PC
P.Mode/Lang	Picture / Format
S.Mode/Search	Sound / Title
Info/Display	Info / Angle
Red/Angle	Red / Netflix / Search
Green/Slow	Green / APP / Repeat

Original	Replacement
Yellow/A-B	Yellow / YouTube / Repeat
Blue/Repeat	Blue / Prime Video / Random

