



Original	Replacement
Power Receiver	Power
HDMI 1	Shift + 1
HDMI 2	Shift + 2
HDMI 3	Shift + 3
HDMI 4	Shift + 4
[A]	List
V-AUX	AV
AV 1	Shift + 5
AV 2	Shift + 6
AV 3	Shift + 7
AV 4	Shift + 8
AV 5	Shift + 9
AV 6	Shift + 0
Audio	Shift + Dual
Dock	Smart
Tuner	Yellow
USB	Shift + AV

Original	Replacement
FM	TV/R
AM	Shift + TV/R
Memory	Rec
Preset+	Shift + Ch +
Preset-	Shift + Ch -
Tuning+	Ch +
Tuning-	Ch -
Info	Info
Movie	Subt
Music	Shift + Subt
Sur. Decode	Dual
Straight	Eject
Sleep	Sleep
Enhancer	Text
Direct	Format
BD/DVD	Red
TV	Green





Original	Replacement
 Setup	 Options
 Radio	 3D
 Vol+	 Vol +
 Vol-	 Vol -
 Option	 Shift + Options
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Return	 Back
 Display	 Shift + Info
 Top Menu	 Menu
 Pop-Up Menu	 D. Menu
 Mute	 Mute
 Stop	 Stop
 Pause	 Pause

Original	Replacement
 Mode	 Media
 Play	 Play
 <<	 <<
 >>	 >>
  <<	  <<
 >>	 >>
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide







