



Original	Replacement
Open/Close	Eject / Surround
Dimmer	Shift + Mute / Dimmer
Power	Power
Source	AV / Input / RDS
Pure Direct	Subtitle / EQ
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Program	TV/Radio /
Clear	Exit / Cancel / Clear

Original	Replacement
Repeat	Green / APP / Repeat
A/B	Yellow / YouTube / Repeat
Shuffle	Blue / Prime Video / Random
Pop-Up Menu	D.Menu / Top
Home	Menu / Home
Now Playing	Picture / Format
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Setup	Setup / OPT /
Return	Back / Return
Display	Display / Media
Play	Play / Slow
Pause	Pause / Step / Freeze
Option	Shift + Setup / OPT / Tools





Original	Replacement	Original	Replacement
	<< / Tune-		
	I<< / Preset-		
	Stop / Hold		
	>> / Tune+		
	>>I / Preset+		
	Input Up AMP / CH+ / Page+		
	Vol+ AMP / Vol+		
	+  Shift + Power		
	Input Down / CH- / Page-		
	Vol- AMP / Vol-		
	Mute AMP / Mute / Dimmer		


