



















| Original | Replacement |
|-------------|-------------------------|
| Open/Close | Eject / Surround |
| Power | Power |
| Bluetooth | Shift + 9 |
| USB | Shift + 8 |
| AUX/Digital | Shift + 7 |
| Net | Shift + Display / Media |
| Tuner | Shift + 6 |
| CD | Shift + 3 |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |

| Original | Replacement |
|----------|-----------------------|
| Memory | Guide / EPG / -/-- |
| 0 | 0 |
| Option | Setup / OPT / |
| <<</<< | <<< / Tune- |
| >>>/>>> | >>> / Tune+ |
| Up | Up |
| Left | Left |
| Enter | OK |
| Right | Right |
| Down | Down |
| Stop | Stop / Hold |
| Play | Play / Slow |
| Pause | Pause / Step / Freeze |
| Volume+ | Vol+ |
| Mute | Mute / Dimmer |
| Volume- | Vol- |
| Repeat | Green / APP / Repeat |





| Original | Replacement | Original | Replacement |
|---|---|----------|-------------|
|  Shuffle |  Blue / Prime Video / Random | | |
|  Display |  Display / Media | | |
|  Dimmer |  Shift + Mute / Dimmer | | |
|  Sleep |  Sleep / Timer | | |
|  Home |  Menu / Home | | |
|  Favorites A |  Sound / Title | | |
|  Favorites B |  Audio / Lang I/II | | |
|  Favorites C |  Subtitle / EQ | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

