



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Nicam/A2	 Shift + Audio / Lang I/II
 Aspect	 Shift + Picture / Format
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Shift + Guide / EPG / -/--	 Shift + Guide / EPG / -/--
 0	 0

Original	Replacement
 Recall	 Back / Return
 Display	 Display / Media
 Freeze	 Pause / Step / Freeze
 Rec/Auto	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear





Original	Replacement
CH+ / Page+	CH+ / Page+
Subtitle	Subtitle / EQ
Vol+	Vol+
CH- / Page-	CH- / Page-
T.Shift	Setup / OPT /
Vol-	Vol-
Play/Pause/Hold	Play / Slow
Play/Pause/Hold	+ Shift + Stop /
<</Reveal	<< / Tune-
>>/Size	Zoom / Size
>>/Size	>> / Tune+
Stop/Index	Stop / Hold
I<<	I<< / Preset-
S.PAGE/>>I	>>I / Preset+
Text	Text / Goto
FAV	Fav / Marker / PC
Audio	Audio / Lang I/II

Original	Replacement
DTV	Smart / List
EPG	Guide / EPG / -/-
Tv/Radio	TV/Radio /

