 



 



 



 


 
 
 


 
 

 
 


 













 


 







 








 

 



 




Original	Replacement	Original	Replacement
 Power	 Power	 -/--/+10	 Guide
 Mute	 Mute	 Swap/Prog	 Pre Ch
 Source	 AV	 Tv Menu	 Menu
 P.Mode	 Shift + Format	 Exit	 Exit
 S.Mode	 Shift + Dual	 Goto/Text	 Text
 I/II/Audio	 Dual	 Display	 Info
 Sleep	 Sleep	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Enter	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 PR+	 Ch +
 8	 8	 PR-	 Ch -
 9	 9	 Red/D.Setup	 Red
 0	 0	 Green/A-B	 Green





Original	Replacement
Yellow/Angle	Yellow
Blue/Repeat	Blue
Subtitle	Subt
Play	Play
Pause/hold	Pause
Size	Format
D.Disc/Reveal	List
D.Menu/Mix	D. Menu
Zoom/TXT	Shift + Eject
I<</Subpage	I<<
>>I/Lang	>>I
Stop/FAV-	Stop
<</FAV	<<
>>/FAV+	>>
Eject/EPG	Eject
USB/SD	Smart
Still	Options

Original	Replacement
Recorder	Rec
TV/Radio	TV/R

