



 





 
 

 


 

 



 



 



 






 







 


 





 






 
 
 

 










 





Original		Replacement		Original		Replacement	
	Power		Power		Auto/Angle		Smart
	Open/Close		Eject		USB/Dev.List		AV
	1		1		Filelist		List
	2		2		Recall		Back
	3		3		Info/Display		Info
	4		4		Text/Title		Text
	5		5		DVD/DVB		Media
	6		6		View/Tv/Radio		TV/R
	7		7		Repeat		Shift + Text
	8		8		Menu		Menu
	9		9		PBC/EPG		Shift + Guide
	0		0		Exit/Return		Exit
	10+		Guide		CH+		Ch +
	Goto		Sleep		CH-		Ch -
	Mute		Mute		Up		Up
	Audio		Dual		Down		Down
	Subtitle		Subt		Right/Vol+		Right





Original	Replacement
 Left/Vol-	 Left
 Enter	 Ok
 Red/Prog	 Red
 Green/Clear	 Green
 Yellow/Setup	 Yellow
 Blue/A-B	 Blue
 Vol+	 Vol +
 Vol-	 Vol -
 Rec	 Rec
 Timeshift	 3D
 Zoom	 Shift + Eject
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 FAV/Step	 Pre Ch
 <</Page-	 <<
 >>/Page+	 >>

Original	Replacement
 I<<	 I<<
 I>>	 I>>
 V-Mode	 Format
 L/R	 Shift + D. Menu
 Slow	 D. Menu
 HDMI	 Options

