

 
 


| Original | Replacement | Original | Replacement |
|--------------|----------------------------|----------|---------------------------|
| Standby | Power | NICAM | Shift + Audio / Lang I/II |
| Open/Close / | Eject / Surround | CH + | CH+ / Page+ |
| MUTE | Mute / Dimmer | VOL - | Vol- |
| 1 | 1 | DISPLAY | Display / Media |
| 2 | 2 | CH - | CH- / Page- |
| 3 | 3 | Up | Up |
| 4 | 4 | Left | Left |
| 5 | 5 | OK | OK |
| 6 | 6 | Right | Right |
| 7 | 7 | LCD MENU | Shift + Menu / |
| 8 | 8 | Down | Down |
| 9 | 9 | EXIT | Exit / Cancel / Clear |
| -/-- | Shift + Guide / EPG / -/-- | INPUT | AV / Input / RDS |
| 0 | 0 | P.MODE | Picture / Format |
| RECALL | Back / Return | S.MODE | Sound / Title |
| VOL + | Vol+ | SLEEP | Sleep / Timer |
| ASPECT | Shift + Picture / Format | FAV | Fav / Marker / PC |





| Original | Replacement |
|---|---|
|  FAV - |  Shift + CH- / |
|  FAV + |  Shift + CH+ / |
|  EPG |  Guide / EPG / -/-- |
|  TEXT |  Text / Goto |
|  HOLD |  Shift + Stop / |
|  Subtitle |  Subtitle / EQ |
|  TV/RADIO |  TV/Radio / |
|  INDEX / D.DISP |  Menu / Home |
|  SIZE / ZOOM |  Zoom / Size |
|  REVEAL/ANGLE |  Info / Angle |
|  TITLE / Subpage |  Shift + Sound / Title |
|  D.MENU |  D.Menu / Top |
|  Audio |  Audio / Lang I/II |
|  Goto |  Shift + Text / |
|  Setup |  Setup / OPT / |
|  MEDIA |  Shift + Display / Media |
|  PLAY/PAUSE |  Play / Slow |

| Original | Replacement |
|---|---|
|  PLAY/PAUSE |  Shift + Play / |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  REC |  Rec / Rec Mode |
|  STOP |  Stop / Hold |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
|  RED / Prog |  Red / Netflix / Search |
|  GREEN / Intro |  Green / APP / Repeat |
|  YELLOW / |  Yellow / YouTube / Repeat |
|  YELLOW / |  Shift + Yellow / YouTube / |
|  BLUE / A-B |  Blue / Prime Video / Random |

