 


 



 
 
 






 


 
 




 

 



 









 



 











 









 

 

 





 

 
 
 

 
 
 

 

 
 

 

 
 

 
 
 
 
 




Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Play/Pause	 Pause	 -/--	 Shift + Guide
 Mute	 Mute	 Jump	 Smart
 Source	 AV	 Menu	 Menu
 P.Mode	 Shift + Format	 Info	 Info
 S.Mode	 Shift + Dual	 Sleep	 Sleep
 I/II/Audio	 Dual	 Exit	 Exit
 P.Size	 Format	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Enter	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 P+	 Ch +
 8	 8	 P-	 Ch -
 9	 9	 Red/D.Setup	 Red





Original		Replacement		Original		Replacement	
	Green/Repeat		Green		Subtitle		Subt
	Yellow/Zoom		Yellow		Guide		Guide
	Blue/Goto		Blue				
	[≡i]/FAV.CH		Pre Ch				
	[≡?]/Freeze		Shift + Pause				
	[≡◆]/USB/SD		Media				
	[≡+]/Tv/Radio		TV/R				
	Rec		Rec				
	Stop		Stop				
	Open/Close		Eject				
	Play/Pause		Play				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	DVD Menu		D. Menu				
	Text		Text				





Original	Replacement	Original	Replacement
Power	Power	S. Mode	Shift + Dual
Mute	Mute	Source	AV
1	1	CH +	Ch +
2	2	CH -	Ch -
3	3	Up	Up
4	4	Right	Right
5	5	Down	Down
6	6	Left	Left
7	7	OK	Ok
8	8	CH. Edit	Smart
9	9	Menu	Menu
0	0	Aspect	Format
-/--	Shift + Guide	Sleep	Sleep
Repeat	Text	Rec	Rec
Vol +	Vol +	Rec Menu	Shift + Rec
Vol -	Vol -	Red	Red
Pic. Mode	Options	Green	Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Blue		Blue				
	CH. Group		Media				
	TV / Radio		TV/R				
	I/II Audio		Dual				
	Subtitle		Subt				
	EPG		Guide				
	Info		Info				
	Play/Pause / Size		Play				
	Stop / Reveal		Stop				
	I<< / Text (Page)		I<<				
	>>I / Index (Page +)		>>I				
	<< / Subpage (FAV -)		<<				
	>> / Hold(Fav +)		>>				
	Play/Pause / Size		Pause				

