 

 









 



 



 

 

 

 

 

 

 

 



 







 









 

 

 





 
 


 


 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Mark		Fav / Marker / PC
	4		4
	5		5
	6		6
	Tv/Radio		TV/Radio /
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	Timeshift		Smart / List
	0		0
	Recall		Back / Return
	Info		Info / Angle
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Text		Text / Goto
	Down		Down
	EPG		Guide / EPG / -/-
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	Rec		Rec / Rec Mode
	Audio/Lang		Audio / Lang I/II





Original		Replacement		Original	Replacement
	>>		>> / Tune+		
	Page Up	 + 	Shift + CH+ /		
	Page Down	 + 	Shift + CH- /		
	>>		>> / Preset+		
	Vol-		Vol-		
	Vol+		Vol+		
	CH-		CH- / Page-		
	CH+		CH+ / Page+		
	HDMI	 + 	Shift + 0		
	Zoom		Zoom / Size		
	Subtitle		Subtitle / EQ		
	Auto/Goto		D.Menu / Top		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		

