

 
 

 

















Original		Replacement		Original		Replacement	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		OK		OK
	1		1		Right		Right
	2		2		Home		D.Menu / Top
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Netflix		Shift + Red / Netflix /
	6		6		Vol+		Vol+
	7		7		Info		Info / Angle
	8		8		PR+		CH+ / Page+
	9		9		Vol-		Vol-
	CH List		Smart / List		EPG		Guide / EPG / -/-
	0		0		PR-		CH- / Page-
	Return/Back		Back / Return		Rec		Rec / Rec Mode
	Menu		Menu / Home		Nicom I/II		Audio / Lang I/II
	Up		Up		Text		Text / Goto
	Source		AV / Input / RDS		AD/Subpage		Sound / Title





	Original	Replacement		Original	Replacement
	FAV/Size	Fav / Marker / PC			
	FAV/Size	Zoom / Size			
	Quick/Hold	Display / Media			
	Red	Red / Netflix / Search			
	Green	Green / APP / Repeat			
	Yellow	Yellow / YouTube / Repeat			
	Blue	Blue / Prime Video / Random			
	Play	Play / Slow			
	Pause/Index	Pause / Step / Freeze			
	<</Reveal	<< / Tune-			
	>>/Mix	>> / Tune+			
	Stop/Cancel	Stop / Hold			

