





 








 



 
 
 




 







 
 
 
 
 
 
 

 
 

 
 

 
 
 

 

 
 
 

 
 
 
 
 
 
 









 

 


Original	Sustituto
	 Power
	 OK
	 UP
	 DOWN
	 RIGHT
	 LEFT
	 BACK
	 Play
	 Pause
	 MEDIA
	 MUTE
	 VOL +
	 VOL -
	 -/- / EPG
	 CH +
	 CH -
	 VOD

Original	Sustituto
	 SRC
	 TEXT
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 P/C / FAV
	 EXIT
	 INFO
	 MENU
	 Red (A)





Original	Sustituto	Original	Sustituto
Green	 B	Green (B)	
Yellow	 C	Yellow (C)	
Blue	 D	Blue (D)	
 123	 TV/R	TV/R	
Tools	 OPT+	OPT+	
Stop	 Stop	Stop	
Rec	 Rec	Rec	
<</ <<	 Rewind	Rewind	
>>/>>	 Fast Forward	Fast Forward	
CH List	 WIDE	WIDE	
AD/Subt.	 Subt.	Subt.	
E-Manual	 Audio	Audio	

