



Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 << / [≡o]	 << / Tune-
 >> / [≡?]	 >> / Tune+
 << / [≡+]	 << / Preset-
 >> / [≡..]	 >> / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 [≡i]	 Smart / List
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 Freeze	 Shift + Pause / Step / Freeze

Original	Sustituto
 Info	 Info / Angle
 []/Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 EPG	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 CH+	 CH+ / Page+
 Vol-	 Vol-
 REP/Rec	 Rec / Rec Mode
 CH-	 CH- / Page-
 1	 1

































Original	Sustituto	Original	Sustituto
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
0	0	HDMI - BAT 0	0
RECALL	Recall	RETURN BACK	Back / Return

Original	Sustituto





Original	Sustituto	Original	Sustituto
Power	 Power	TXT/MIX	 Text / Goto
Mute	 Mute / Dimmer	Menu	 Menu / Home
Play	 Play / Slow	Up	 Up
Pause	 Pause / Step / Freeze	Info	 Info / Angle
Stop	 Stop / Hold	Left	 Left
Rec	 Rec / Rec Mode	Enter	 OK
<</Hold	 << / Tune-	Right	 Right
>>/Index	 >> / Tune+	Cancel	 Exit / Cancel / Clear
I<<	 I<< / Preset-	Down	 Down
>>I	 >>I / Preset+	Back	 Back / Return
Nicam/A2	 Audio / Lang I/II	Vol+	 Vol+
Subtitle	 Subtitle / EQ	List	 Smart / List
Subpage	 Eject / Surround	CH+	 CH+ / Page+
Size	 Zoom / Size	Vol-	 Vol-
Sleep	 Sleep / Timer	Mode	 Display / Media
DTV/Radio	 TV/Radio /	CH-	 CH- / Page-
Reveal	 D.Menu / Top	1	 1

Original	Sustituto	Original	Sustituto
Power	 Power	TXT/MIX	 Text / Goto
Mute	 Mute / Dimmer	Menu	 Menu / Home
Play	 Play / Slow	Up	 Up
Pause	 Pause / Step / Freeze	Info	 Info / Angle
Stop	 Stop / Hold	Left	 Left
Rec	 Rec / Rec Mode	Enter	 OK
<</Hold	 << / Tune-	Right	 Right
>>/Index	 >> / Tune+	Cancel	 Exit / Cancel / Clear
I<<	 I<< / Preset-	Down	 Down
>>I	 >>I / Preset+	Back	 Back / Return
Nicam/A2	 Audio / Lang I/II	Vol+	 Vol+
Subtitle	 Subtitle / EQ	List	 Smart / List
Subpage	 Eject / Surround	CH+	 CH+ / Page+
Size	 Zoom / Size	Vol-	 Vol-
Sleep	 Sleep / Timer	Mode	 Display / Media
DTV/Radio	 TV/Radio /	CH-	 CH- / Page-
Reveal	 D.Menu / Top	1	 1





















Original	Sustituto	
2	2	2
3	3	3
4	4	4
5	5	5
6	6	6
7	7	7
8	8	8
9	9	9
EPG	Guide / EPG / -/--	
0	0	0
FAV	Fav / Marker / PC	
Red	Red / Netflix / Search	
Green	Green / APP / Repeat	
Yellow	Yellow / YouTube / Repeat	
Blue	Blue / Prime Video / Random	
<</Hold	Shift + Stop /	
FAV-	Shift + Left	

Original	Sustituto	
FAV+	Shift + Right	
-/--	Shift + Guide / EPG / -/--	


















Original	Sustituto	Original	Sustituto
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4

Original	Sustituto	Original	Sustituto
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4





Original	Sustituto	Original	Sustituto
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Epg	 Guide / EPG / -/--		
0	 0		
Fav	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Freeze	 Shift + Pause / Step /		

