



Original	Sustituto
POWER	Power
INFO	Info / Angle
HDMI CONTROL	Smart / List
SLEEP	Sleep / Timer
SCREEN	Picture / Format
SOURCE	AV / Input / RDS
PRESETS	Setup / OPT /
1	1
2	2
3	3
ZOOM/RED/▲	Zoom / Size
ZOOM/RED/▲	Shift + CH+ /
ZOOM/RED/▲	Red / Netflix / Search
4	4
5	5
6	6
REPEAT/GREEN/▼	Shift + CH- / Page-

Original	Sustituto
REPEAT/GREEN/▼	Green / APP / Repeat
7	7
8	8
9	9
ROOT/YELLOW	Yellow / YouTube / Repeat
RETURN	Back / Return
0	0
MENU	Menu / Home
TITLE/BUE	Sound / Title
TITLE/BUE	Blue / Prime Video / Random
UP	Up
LEFT	Left
OK/SELECT	OK
RIGHT	Right
DOWN	Down
P+	CH+ / Page+
P-	CH- / Page-





Original	Sustituto
	VOL - Vol-
	VOL + Vol+
	PC FAV MARKER Fav / Marker / PC
	LANG I/II Audio / Lang I/II
	EQ SUBTITLE Subtitle / EQ
	DIMMER MUTE Mute / Dimmer
	SHIFT + RETURN BACK Shift + Back / Return
	GUIDE EPG Guide / EPG / -/-
	TOP MENU D.MENU D.Menu / Top
	GOTO TEXT Text / Goto
	CLEAR EXIT CANCEL Exit / Cancel / Clear
	MEDIA DISPLAY Display / Media
	SHIFT + ANGLE INFO Shift + Info / Angle
	SHIFT + NETFLIX SEARCH Shift + Red / Netflix /
	REC MODE Rec / Rec Mode
	HOLD Stop / Hold
	SLOW Play / Slow

Original	Sustituto
	STEP - FREEZE Pause / Step / Freeze
	TUNE- << / Tune-
	TUNE+ >> / Tune+
	PRESET- I<< / Preset-
	PRESET+ >>I / Preset+

