 

 

 

 

 

 



 

 

 



 







 


 




 
 


 





 



 

 

 

 

 

 
 
 







Original	Sustituto	Original	Sustituto
	Power		Power
	DTV		Shift + TV/Radio / Program
	TV		TV/Radio /
	AV		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	PRE-CH		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	i		Info / Angle
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-
	EPG		Guide / EPG / -/-
	Option		Setup / OPT /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home





Original	Sustituto
Exit	Exit / Cancel / Clear
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
Rec	Rec / Rec Mode
Pause	Pause / Step / Freeze
Stop	Stop / Hold
File List/[≡i]	Smart / List
Bookmark/[.,≡]	Display / Media
Repeat/[≡O]	Shift + Green / APP /
A<>B/[≡?]	Shift + Yellow / YouTube /
PIC Size	Zoom / Size
PIC Mode	Picture / Format
SND Mode	Sleep / Timer
M/S	D.Menu / Top

Original	Sustituto

