






 





 

 

 

 


















Original	Sustituto
 Power	 Power
 Mute	 Mute
 DTV	 Media
 Rec List	 List
 TXT	 Text
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Back	 Back

Original	Sustituto
 TShift	 Eject
 Freeze	 3D
 Rec	 Rec
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Info	 Info
 Source	 AV
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 Menu	 Menu
 Exit	 Exit
 Vol+	 Vol +





Original	Sustituto
VOL -	VOL -
GUIDE	GUIDE
FAV	FAV PRE-CH
CH +	CH +
CH -	CH -
HOLD / Play-Pause	PLAY MODE
Pause	Pause
Reveal / <<	<<
Size / >>	>>
Index / Stop	E-MANUAL D.MENU
Stop	Stop
I<<	I<<
Subpage / >>	>>
Format	PICTURE FORMAT
Audio	SOUND DUAL
Subt	AD SUBT
TV/Radio	SEARCH TV/R

Original	Sustituto
-/--	SHIFT + -/--
P.Mode	SHIFT + PICTURE FORMAT
S.Mode	SHIFT + SOUND DUAL

