















 









 










Original	Sustituto
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Menu
	0
	Sortie
	Vol+
	Up
	P+

Original	Sustituto
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Menu / Home
	0
	Exit / Cancel / Clear
	Vol+
	Up
	CH+ / Page+

Original	Sustituto
	Left
	OK
	Right
	Vol-
	Down
	P-
	Info
	FAV
	Audio
	EPG
	Red/RCL
	Green
	Pause
	Yellow/Sous
	Blue
	Text
	SAT

Original	Sustituto
	Left
	OK
	Right
	Vol-
	Down
	CH- / Page-
	Info / Angle
	Fav / Marker / PC
	Audio / Lang I/II
	Guide / EPG / -/-
	Red / Netflix / Search
	Green / APP / Repeat
	Pause / Step / Freeze
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto
	Shift + 0



