









Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 DTV/ATV	 D.Menu / Top
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Sustituto
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 MTS	 Info / Angle
 Rec List	 Smart / List
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 FAV/List	 Fav / Marker / PC
 Rec	 Rec / Rec Mode


















 





 



 










 









 



Original	Sustituto
 Freeze	 Pause / Step / Freeze
 Guide	 Guide / EPG / -/--
 <<	 << / Tune-
 >> / Aspect	 >> / Tune+
 >> / Aspect	 Shift + Picture / Format
 << / Cancel	 << / Preset-
 << / Cancel	 Shift + Exit / Cancel / Clear
 >> / Sub.PG	 >> / Preset+
 Stop / Index	 Stop / Hold
 Play/Pause / Timeshift	 Play / Slow
 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Reveal	 Eject / Surround
 Size	 Zoom / Size
 Hold	 Shift + Stop /
 Text	 Text / Goto
 Red	 Red / Netflix / Search

Original	Sustituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Cyan	 Blue / Prime Video / Random















 
 
Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 DTV/ATV	 D.Menu / Top
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Sustituto
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 MTS	 Info / Angle
 Rec List	 Smart / List
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 FAV/List	 Fav / Marker / PC
 Rec	 Rec / Rec Mode





Original	Sustituto	Original	Sustituto
 Freeze	 Pause / Step / Freeze	 Green	 Green / APP / Repeat
 Guide	 Guide / EPG / -/-	 Yellow	 Yellow / YouTube / Repeat
 <<	 << / Tune-	 Cyan	 Blue / Prime Video / Random
 >> / Aspect	 >> / Tune+		
 >> / Aspect	 Shift + Picture / Format		
 I<< / Cancel	 I<< / Preset-		
 I<< / Cancel	 Shift + Exit / Cancel / Clear		
 >>I / Sub.PG	 >>I / Preset+		
 Stop / Index	 Stop / Hold		
 Play/Pause / Timeshift	 Play / Slow		
 Tv/Radio	 TV/Radio /		
 Subtitle	 Subtitle / EQ		
 Reveal	 Eject / Surround		
 Size	 Zoom / Size		
 Hold	 Shift + Stop /		
 Text	 Text / Goto		
 Red	 Red / Netflix / Search		

Original	Sustituto	Original	Sustituto
 Green	 Green / APP / Repeat	 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat	 Yellow	 Yellow / YouTube / Repeat
 Cyan	 Blue / Prime Video / Random	 Cyan	 Blue / Prime Video / Random

