














Original	Sustituto
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 D.Menu / Top
	 Back / Return
	 Picture / Format
	 Sound / Title
	 Sleep / Timer

Original	Sustituto
	 Menu / Home
	 AV / Input / RDS
	 Up
	 Left
	 OK
	 Right
	 Down
	 Exit / Cancel / Clear
	 Display / Media
	 Vol+
	 Vol-
	 Info / Angle
	 Smart / List
	 CH+ / Page+
	 CH- / Page-
	 Fav / Marker / PC
	 Rec / Rec Mode





Original	Sustituto
 Freeze	 Pause / Step / Freeze
 Guide	 Guide / EPG / -/-
 <<	 << / Tune-
 >> / Aspect	 >> / Tune+
 >> / Aspect	 Shift + Picture / Format
 I<< / Cancel	 I<< / Preset-
 I<< / Cancel	 Shift + Exit / Cancel / Clear
 >>I / Sub.PG	 >>I / Preset+
 Stop / Index	 Stop / Hold
 Play/Pause / Timeshift	 Play / Slow
 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Reveal	 Eject / Surround
 Size	 Zoom / Size
 Hold	 Shift + Stop /
 Text	 Text / Goto
 Red	 Red / Netflix / Search


Original	Sustituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Cyan	 Blue / Prime Video / Random







Original	Sustituto
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 D.Menu / Top
	 Back / Return
	 Picture / Format
	 Sound / Title
	 Sleep / Timer

Original	Sustituto
	 Menu / Home
	 AV / Input / RDS
	 Up
	 Left
	 OK
	 Right
	 Down
	 Exit / Cancel / Clear
	 Display / Media
	 Vol+
	 Vol-
	 Info / Angle
	 Smart / List
	 CH+ / Page+
	 CH- / Page-
	 Fav / Marker / PC
	 Rec / Rec Mode



