



Original	Sustituto
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 D.Menu / Top
	 Back / Return
	 Picture / Format
	 Sound / Title
	 Sleep / Timer

Original	Sustituto
	 Menu / Home
	 AV / Input / RDS
	 Up
	 Left
	 OK
	 Right
	 Down
	 Exit / Cancel / Clear
	 Display / Media
	 Vol+
	 Vol-
	 Info / Angle
	 Smart / List
	 CH+ / Page+
	 CH- / Page-
	 Fav / Marker / PC
	 Rec / Rec Mode



 

















 





















Original		Sustituto		Original		Sustituto	
	Freeze		Pause / Step / Freeze		Green		Green / APP / Repeat
	Guide		Guide / EPG / -/-		Yellow		Yellow / YouTube / Repeat
	<<		<< / Tune-		Cyan		Blue / Prime Video / Random
	>> / Aspect		>> / Tune+				
	>> / Aspect		Shift + Picture / Format				
	I<< / Cancel		I<< / Preset-				
	I<< / Cancel		Shift + Exit / Cancel / Clear				
	>>I / Sub.PG		>>I / Preset+				
	Stop / Index		Stop / Hold				
	Play/Pause / Timeshift		Play / Slow				
	Tv/Radio		TV/Radio /				
	Subtitle		Subtitle / EQ				
	Reveal		Eject / Surround				
	Size		Zoom / Size				
	Hold		Shift + Stop /				
	Text		Text / Goto				
	Red		Red / Netflix / Search				














Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 DTV/ATV	 D.Menu / Top
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Sustituto
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 MTS	 Info / Angle
 Rec List	 Smart / List
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 FAV/List	 Fav / Marker / PC
 Rec	 Rec / Rec Mode





Original	Sustituto
 Freeze	 Pause / Step / Freeze
 Guide	 Guide / EPG / -/-
 <<	 << / Tune-
 >> / Aspect	 >> / Tune+
 >> / Aspect	 Shift + Picture / Format
 I<< / Cancel	 I<< / Preset-
 I<< / Cancel	 Shift + Exit / Cancel / Clear
 >>I / Sub.PG	 >>I / Preset+
 Stop / Index	 Stop / Hold
 Play/Pause / Timeshift	 Play / Slow
 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Reveal	 Eject / Surround
 Size	 Zoom / Size
 Hold	 Shift + Stop /
 Text	 Text / Goto
 Red	 Red / Netflix / Search

Original	Sustituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Cyan	 Blue / Prime Video / Random

