





| Original | | Sustituto | | Original | | Sustituto | |
|----------|---------|-----------|-------------------------|----------|----------|-----------|-----------------------|
| | POWER | | Power | | 9 wxyz | | 9 |
| | ←○ | | Shift + Smart / List | | TV | | TV/Radio / |
| | **/Ö | | Shift + Display / Media | | 0 | | 0 |
| | *²/♀ | | Shift + Red / Netflix / | | ↔ | | Shift + Back / Return |
| | SOURCE | | AV / Input / RDS | | TV GUIDE | | Guide / EPG / -/- |
| | PRESETS | | Smart / List | | [≡] | | Text / Goto |
| | ≡ | | Setup / OPT / | | MENU | | Menu / Home |
| | ♪/☺/□ | | Display / Media | | Q.MENU | | D.Menu / Top |
| | SLEEP | | Sleep / Timer | | UP | | Up |
| | 1 . /@ | | 1 | | LEFT | | Left |
| | 2 abc | | 2 | | OK | | OK |
| | 3 def | | 3 | | RIGHT | | Right |
| | 4 ghi | | 4 | | DOWN | | Down |
| | 5 jkl | | 5 | | BACK | | Back / Return |
| | 6 mno | | 6 | | →□← | | Picture / Format |
| | 7 pqrs | | 7 | | EXIT | | Exit / Cancel / Clear |
| | 8 tuv | | 8 | | *FAV | | Fav / Marker / PC |





| Original | Sustituto |
|--|---|
|  VOL+ |  Vol+ |
|  MUTE |  Mute / Dimmer |
|  P+ |  CH+ / Page+ |
|  VOL- |  Vol- |
|  INFO |  Info / Angle |
|  P- |  CH- / Page- |
|  REC |  Rec / Rec Mode |
|  PLAY |  Play / Slow |
|  PAUSE |  Pause / Step / Freeze |
|  STOP |  Stop / Hold |
|  LANG. |  Audio / Lang I/II |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  [≡]... |  Sound / Title |
|  RED |  Red / Netflix / Search |
|  GREEN |  Green / APP / Repeat |
|  YELLOW |  Yellow / YouTube / Repeat |

| Original | Sustituto |
|--|---|
|  BLUE |  Blue / Prime Video / Random |

