 

 



 



 







 









 









Original	Sustituto
 POWER	 Power
 ←○	 Shift + Smart / List
 ※*/Ö	 Shift + Display / Media
 ※²/♀	 Shift + Red / Netflix /
 SOURCE	 AV / Input / RDS
 PRESETS	 Smart / List
 ≡≡≡	 Setup / OPT /
 ♪/☺/■	 Display / Media
 SLEEP	 Sleep / Timer
 1 . /@	 1
 2 abc	 2
 3 def	 3
 4 ghi	 4
 5 jkl	 5
 6 mno	 6
 7 pqrs	 7
 8 tuv	 8

Original	Sustituto
 9 wxyz	 9
 TV	 TV/Radio /
 0	 0
 ↔	 Shift + Back / Return
 TV GUIDE	 Guide / EPG / -/-
 [≡]	 Text / Goto
 MENU	 Menu / Home
 Q.MENU	 D.Menu / Top
 UP	 Up
 LEFT	 Left
 OK	 OK
 RIGHT	 Right
 DOWN	 Down
 BACK	 Back / Return
 →□←	 Picture / Format
 EXIT	 Exit / Cancel / Clear
 ※FAV	 Fav / Marker / PC



[illegible]