












Original	Sustituto
	
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
	
ATV/DTV/Content Menu	
	
	
	
	

Original	Sustituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	







 
 


 
 

 




 


 
 

 

 







 


 
 

 
 
 
 

 

 
 

 

 
 
 
 
 
 




 

 


 




	Original	Sustituto		Original	Sustituto
	Text	Text			
	II/II>/[▼]	Pause			
	[i+]/[≡i]	Info			
	O)I/II	Dual			
	Stop	Stop			
	Play/[≡o]	Play			
	Eject	Eject			
	I<</[≡?]	I<<			
	<</[≡+]	<<			
	>>/[≡◇]	>>			
	>>I/[O]/[≡X]	>>I			
	AD	+  Shift + Subt			
	Audio	+  Shift + Dual			





Original	Sustituto	Original	Sustituto
	←[/]→		3D
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Exit/Return		Exit
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Guide/Top		Guide
	[<>]		Format
	Text		Text
	Subtitle		Subt
	O)/II		Dual
	[i+]/[≡i]		Info
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	II/II>/[▼]		Pause
	Play/[≡o]		Play
	Stop		Stop
	Eject		Eject





 







 

 





 
 

 
 
 
 

 


 






 
Original	Sustituto	Original	Sustituto
	<</[≡?]		<<
	<</[≡+]		<<
	>>/[≡◇]		>>
	>> /[O]/[≡X]		>>
	Audio	+	Shift + Dual

Original	Sustituto





Original	Sustituto
 Power	 Power
 ←[/]→	 3D
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Source	 AV
 ATV/DTV/Content Menu	 Smart
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +

Original	Sustituto
 P-	 Ch -
 Mute	 Mute
 Guide/Top	 Guide
 Exit/Return	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu/DVD	 Menu
 Tv/FAV/Radio/Set	 TV/R
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text
 [<>]	 Format





Original		Sustituto		Original		Sustituto	
	[i+]/[≡i]		Info				
	II/II>/[▼]		Pause				
	Subtitle		Subt				
	O)/II		Dual				
	Play/[≡o]		Play				
	Stop		Stop				
	Eject		Eject				
	I<</[≡?]		I<<				
	<</[≡+]		<<				
	>>/[≡◇]		>>				
	>>I/[O]/[≡X]		>>I				
	Audio	 + 	Shift + Dual				
	AD	 + 	Shift + Subt				

