







 



 







 







 

 







 
 


 



 

 





Original	Sustituto
	 Power
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Menu / Home
	 Smart / List
	 Up
	 Left
	 OK
	 Right
	 Down
	 AV / Input / RDS
	 TV/Radio /
	 Info / Angle
	 Audio / Lang I/II
	 Vol+

Original	Sustituto
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Back / Return
	 0
	 Exit / Cancel / Clear
	 Shift + Guide / EPG / -/--





Original	Sustituto	Original	Sustituto
 [=]/Text	 Text / Goto		
 [=o]	 << / Tune-		
 [=+]	 >> / Tune+		
 [=x]	 l<< / Preset-		
 [.=]/[*]	 >>l / Preset+		
 [=◇]/[+]/Wide	 Picture / Format		
 [=?]/PC	 Fav / Marker / PC		
 [=i]/Guide	 Guide / EPG / -/--		

