






 














 

 

 



 





 



 



















 



Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 SUBT.	 Subtitle / EQ
 TV	 TV/Radio /
 Tools	 Setup / OPT /
 TTX/MIX	 Text / Goto
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 PRE-CH	 Back / Return
 VOL+	 Vol+

Original	Sustituto
 CH.LIST	 Smart / List
 PR+	 CH+ / Page+
 VOL-	 Vol-
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 GUIDE	 Guide / EPG / -/-
 0	 0
 FAV.CH	 Fav / Marker / PC
 Red	 Red / Netflix / Search





Original	Sustituto	Original	Sustituto
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Enter	 Shift + OK		
 Return	 Shift + Back / Return		

Original	Sustituto

