 

 

 
 
 
 

 
 
 





 

 

 
 

 


 
 






 









 
 
 






 










Original	Sustituto
 Power	 Power
 Source	 AV
 Subt.	 Subt
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 PRE-CH	 Pre Ch
 TTX/MIX	 Text
 HDMI	 Smart

Original	Sustituto
 DTV	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 PR+	 Ch +
 PR-	 Ch -
 CH.List	 List
 Menu	 Menu
 Media.P	 Media
 Guide	 Guide
 Tools	 Options
 Info	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok





Original	Sustituto
 Return	 Back
 Exit	 Exit
 Red/A	 Red
 Green/B	 Green
 Yellow/C	 Yellow
 Blue/D	 Blue
 PIP	 3D
 PIP Down	 I<<
 PIP Up	 >>I
 P.Mode	 Shift + Format
 SRS	 Dual
 P.Size	 Format
 Still	 D. Menu
 Rec	 Rec
 Stop	 Stop
 <<	 <<
 Play	 Play

Original	Sustituto
 Pause	 Pause
 >>	 >>

