 

 

 
 

 

 
 
 

 

 

 



 
 
 


 


 
 
 


 

 
 



 

 


 
 
 
 

 








 

Original	Sustituto		
	Power		Power
	Source		AV
	Subt.		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	PRE-CH		Pre Ch
	TTX/MIX		Text
	HDMI		Smart

Original	Sustituto		
	DTV		TV/R
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	CH.List		List
	Menu		Menu
	Media.P		Media
	Guide		Guide
	Tools		Options
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok





Original	Sustituto
 Return	 Back
 Exit	 Exit
 Red/A	 Red
 Green/B	 Green
 Yellow/C	 Yellow
 Blue/D	 Blue
 PIP	 3D
 PIP Down	 I<<
 PIP Up	 >>I
 P.Mode	 Shift + Format
 SRS	 Dual
 P.Size	 Format
 Still	 D. Menu
 Rec	 Rec
 Stop	 Stop
 <<	 <<
 Play	 Play

Original	Sustituto
 Pause	 Pause
 >>	 >>

