


 
 




 

 

 
 


 



 

 









Original	Sustituto	Original	Sustituto
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	PRE-CH		Back / Return
	VOL+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+

Original	Sustituto	Original	Sustituto
	VOL-		Vol-
	CH.LIST		Display / Media
	CH.LIST		Shift + Smart / List
	PR-		CH- / Page-
	Menu		Menu / Home
	Smart HUB		Smart / List
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Shift + Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red/A		Red / Netflix / Search





Original	Sustituto
Green/B	Green / APP / Repeat
Yellow/C	Yellow / YouTube / Repeat
Blue/D	Blue / Prime Video / Random
E-Manual	D.Menu / Top
3D	Picture / Format
AD/Subt	Subtitle / EQ
Stop	Stop / Hold
I<<	I<< / Preset-
<<	<< / Tune-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>	>> / Tune+
>>	>> / Preset+

Original	Sustituto

