

 
 
 
 
 
 

 
 
 
 
 







Original	Sustituto
	Power
	Source
	HDMI
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	TTX/MIX
	PRE-CH
	Vol +
	Vol -

Original	Sustituto
	Mute
	CH List
	PR+
	PR-
	Menu
	Media. P
	Guide
	Tools
	Info
	Up
	Right
	Down
	Left
	Enter
	Return
	Exit
	Red/A





Original	Sustituto	Original	Sustituto
Green/B	Green		
Yellow/C	Yellow		
Blue/D	Blue		
Family Story	Media		
Search	TV/R		
Dual I/II	Dual		
Support	Sleep		
P.Size	Format		
AD/Subt	Subt		
<<<	<<<		
I<<<	I<<<		
Pause	Pause		
>>>	>>>		
>>I	>>I		
Rec	Rec		
Play	Play		
Stop	Stop		

