




 


 

 

 

 



 





Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 S.Mode	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 P.Mode	 Picture / Format
 Size	 Zoom / Size
 Sleep	 Sleep / Timer
 Tv/Radio	 TV/Radio /

Original	Sustituto
 Index	 D.Menu / Top
 Reveal	 Setup / OPT /
 Text	 Text / Goto
 AV/Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 i/Info	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Back	 Back / Return
 Vol+	 Vol+
 Rec List	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-





Original	Sustituto
ATV	Display / Media
CH-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Tv Guide	Guide / EPG / -/--
0	0
FAV	Fav / Marker / PC
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat

Original	Sustituto
Blue	Blue / Prime Video / Random
Power/Display	Shift + Power
Hold	Shift + Stop /
Aspect	Shift + Picture / Format
USB	Shift + 8

