 

 

 

 




 

 

 


 
 




 
 
 

 






 




 

 



 

 

 





 










Original	Sustituto
	 AV / Input / RDS
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Back / Return
	 Shift + 0
	 D.Menu / Top
	 Shift + 4

Original	Sustituto
	 Fav / Marker / PC
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 Picture / Format
	 CH- / Page-
	 Audio / Lang I/II
	 Sound / Title
	 Shift + Picture / Format
	 Sleep / Timer
	 Up
	 Left
	 OK
	 Right
	 Menu / Home
	 Down





Original		Sustituto	
	[i+]		Info / Angle
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Teletext		Text / Goto
	Mix		Shift + Text /
	Size		Zoom / Size
	Subpage		Eject / Surround
	Index		TV/Radio /
	Subtitle		Subtitle / EQ
	Hold		Stop / Hold
	Reveal		Display / Media
	Eco		Setup / OPT /
	PR List		Smart / List
	Freeze		Pause / Step / Freeze
	Nothing		Exit / Cancel / Clear

Original		Sustituto	

