











 

 
 









 
 





 








 



 


























 








 





Original	Sustituto	Original	Sustituto
	Power		Power
	Sleep		Sleep / Timer
	Screen		Picture / Format
	Presets		Setup / OPT /
	↔		TV/Radio /
	FAV		Shift + Fav / Marker / PC
	Lang		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	TXT		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/-
	0		0
	Swap		Fav / Marker / PC
	Photo/Music/Movi		D.Menu / Top
	World		Smart / List
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	C		Exit / Cancel / Clear
	Disp.		Display / Media
	Search Mode		Shift + Red / Netflix /
	Return		Back / Return





Original	Sustituto
 CH+	 CH+ / Page+
 Info	 Info / Angle
 Vol+	 Vol+
 CH-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Rec	 Rec / Rec Mode
 Pause	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Red/↑/Zoom	 Red / Netflix / Search
 Red/↑/Zoom	 Zoom / Size
 Green/↓/Repeat	 Green / APP / Repeat

Original	Sustituto
 Yellow/Root	 Yellow / YouTube / Repeat
 Blue/Title	 Blue / Prime Video / Random

