

















 































 

 

 

 












 
 

 

 


 


 



 

Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 DTV	 Shift + 1
 DTV	 TV/Radio /
 Radio	 Shift + TV/Radio / Program
 Radio	 Shift + 6
 USB	 Shift + 8
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Sustituto
 Tv Guide	 Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 P.Mode	 Picture / Format
 CH+	 CH+ / Page+
 S.Mode	 Sound / Title
 Vol-	 Vol-
 FAV	 Fav / Marker / PC
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Source	 AV / Input / RDS





Original	Sustituto
 Down	 Down
 Info	 Info / Angle
 Aspect	 Shift + Picture / Format
 Sleep	 Sleep / Timer
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 Text Hold	 Shift + Stop /
 Zoom/Text/DVD	 Zoom / Size
 Power/Display	 Display / Media
 Power/Display	 Shift + Power
 DVD Menu	 D.Menu / Top
 Rec	 Rec / Rec Mode
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop/Eject	 Stop / Hold
 Stop/Eject	 Eject / Surround

Original	Sustituto
 Rec List/DVD	 Setup / OPT /
 Rec List/DVD	 Smart / List
 << PVR/DVD	 << / Tune-
 >> PVR/DVD	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Red/Goto	 Shift + Text /
 Red/Goto	 Red / Netflix / Search
 Green/A-B	 Green / APP / Repeat
 Green/A-B	 Shift + Yellow / YouTube / YouTube /
 Yellow/Angle/3D	 Yellow / YouTube / Repeat
 Yellow/Angle/3D	 Shift + Info / Angle
 Blue/Repeat	 Blue / Prime Video / Random
 Blue/Repeat	 Shift + Green / APP /

