




 





 









 


 
 

 
 
 










 




Original	Sustituto
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 TV	 TV/R
 Menu	 Menu
 Q.Menu	 D. Menu
 World	 Shift + Guide

Original	Sustituto
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 PR+	 Ch +
 PR-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Exit	 Exit
 Back	 Back
 Mute	 Mute
 i	 Info
 Guide	 Guide
 [≡]/Text	 Text
 Folder	 Format
 [-O-]	 Subt





Original		Sustituto		Original	Sustituto
	* / O		Sleep		
	* / Q		Eject		
	Netflix		Media		
	Camera-Music-Ph		Options		
	YouTube		3D		
	[≡]..		List		
	Lang		Dual		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Play		Play		
	Rec		Rec		
	Pause		Pause		
	>>		>>		
	<<		<<		
	Stop		Stop		

