




 





 









 


 
 

 
 
 










 




Original	Sustituto
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 TV	 TV/R
 Menu	 Menu
 Q.Menu	 D. Menu
 World	 Shift + Guide

Original	Sustituto
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 PR+	 Ch +
 PR-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Exit	 Exit
 Back	 Back
 Mute	 Mute
 i	 Info
 Guide	 Guide
 [≡]/Text	 Text
 Folder	 Format
 [-O-]	 Subt





Original	Sustituto	Original	Sustituto
*/O	Sleep		
*/Q	Eject		
Netflix	Media		
Camera-Music-Ph	Options		
YouTube	3D		
[≡]..	List		
Lang	Dual		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
Play	Play		
Rec	Rec		
Pause	Pause		
>>	>>		
<<	<<		
Stop	Stop		

