




 





 













 
 

 
 
 

 



 








 


 




Original	Sustituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Sustituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	





Original		Sustituto		Original	Sustituto
	* / O	PROG SLEEP	Sleep		
	* / Q	ZOOM ▲	Eject		
	Netflix	APP MEDIA	Media		
	Camera-Music-Ph	SETTINGS OPT	Options		
	YouTube	ECO 3D	3D		
	[≡]..	DISC.NAV LIST	List		
	Lang	SOUND DUAL	Dual		
	Red	A	Red		
	Green	B	Green		
	Yellow	C	Yellow		
	Blue	D	Blue		
	Play	PLAY MODE ▶	Play		
	Rec	REC MODE ●	Rec		
	Pause		Pause		
	>>	▶▶	>>		
	<<	◀◀	<<		
	Stop	■	Stop		

