

 

 

 
 
 

 

 

 

 



 

 

 
 

 





















 

 

 

 

 
 

 

 







Original	Sustituto
	 AV / Input / RDS
	 Power
	 Shift + Yellow / YouTube /
	 Shift + Red / Netflix /
	 Display / Media
	 Rec / Rec Mode
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Audio / Lang I/II
	 << / Tune-
	 >> / Tune+
	 Sound / Title
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random

Original	Sustituto
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Shift + 1
	 TV/Radio /
	 0
	 Fav / Marker / PC
	 Menu / Home
	 Smart / List
	 D.Menu / Top
	 Vol+





Original	Sustituto
PR+	CH+ / Page+
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Vol-	Vol-
PR-	CH- / Page-
Back	Back / Return
Exit	Exit / Cancel / Clear
[-O-]	Picture / Format
Folder	Setup / OPT /
i	Info / Angle
Mute	Mute / Dimmer
*/O	I<< / Preset-
*/Q	>>I / Preset+
[≡]/Text	Text / Goto

Original	Sustituto
Guide	Guide / EPG / -/--

