



| Original    | Sustituto                   |
|-------------|-----------------------------|
| Power       | Power                       |
| Power Tv    | +  Shift + Power            |
| DVD         | +  Shift + 2                |
| HDD         | +  Shift + 7                |
| Open/Close  | Eject / Surround            |
| AV Input Tv | +  Shift + AV / Input / RDS |
| 1           | 1                           |
| 2           | 2                           |
| 3           | 3                           |
| PR+ Tv      | +  Shift + CH+ /            |
| 4           | 4                           |
| 5           | 5                           |
| 6           | 6                           |
| PR- Tv      | +  Shift + CH- /            |
| 7           | 7                           |
| 8           | 8                           |
| 9           | 9                           |

| Original  | Sustituto             |
|-----------|-----------------------|
| Vol+ Tv   | Vol+                  |
| Rec       | Rec / Rec Mode        |
| 0         | 0                     |
| AV Input  | AV / Input / RDS      |
| Vol- Tv   | Vol-                  |
| <<        | << / Tune-            |
| >>        | >> / Tune+            |
| I<<       | I<< / Preset-         |
| >>I       | >>I / Preset+         |
| Pause     | Pause / Step / Freeze |
| Play      | Play / Slow           |
| Stop      | Stop / Hold           |
| Home      | Menu / Home           |
| Up        | Up                    |
| Menu List | D.Menu / Top          |
| Left      | Left                  |
| Enter     | OK                    |



