

 

 


 
 




 
 














 










Original	Sustituto
	 Power
	 Mute / Dimmer
	 Shift + Audio / Lang I/II
	 Shift + Picture / Format
	 Picture / Format
	 Sound / Title
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Shift + Guide / EPG / -/-
	 0

Original	Sustituto
	 Back / Return
	 Display / Media
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Sleep / Timer
	 Up
	 AV / Input / RDS
	 Left
	 OK
	 Right
	 Down
	 Menu / Home
	 Exit / Cancel / Clear





Original		Sustituto	
	CH+		CH+ / Page+
	Subtitle		Subtitle / EQ
	Vol+		Vol+
	CH-		CH- / Page-
	T.Shift		Setup / OPT /
	Vol-		Vol-
	Play/Pause/Hold		Play / Slow
	Play/Pause/Hold		Shift + Stop /
	<</Reveal		<< / Tune-
	>>/Size		Zoom / Size
	>>/Size		>> / Tune+
	Stop/Index		Stop / Hold
	I<<		I<< / Preset-
	S.Page/>>I		>>I / Preset+
	Text		Text / Goto
	FAV		Fav / Marker / PC
	Audio		Audio / Lang I/II

Original		Sustituto	
	DTV		Smart / List
	EPG		Guide / EPG / -/-
	Tv/Radio		TV/Radio /

