

 

 


 
 




 
 










Original	Sustituto
	Power
	Mute
	Nicam/A2
	Aspect
	P.Mode
	S.Mode
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Shift + Audio / Lang I/II
	Shift + Picture / Format
	Picture / Format
	Sound / Title
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Shift + Guide / EPG / -/--
	0

Original	Sustituto
	Recall
	Display
	Freeze
	Rec/Auto
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Sleep / Timer
	Up
	Source
	Left
	Enter
	Right
	Down
	Menu
	Exit
	Back / Return
	Display / Media
	Pause / Step / Freeze
	Rec / Rec Mode
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Sleep / Timer
	Up
	AV / Input / RDS
	Left
	OK
	Right
	Down
	Menu / Home
	Exit / Cancel / Clear





Original	Sustituto
CH+ / Page+	CH+ / Page+
Subtitle	Subtitle / EQ
Vol+	Vol+
CH-	CH- / Page-
T.Shift	Setup / OPT /
Vol-	Vol-
Play/Pause/Hold	Play / Slow
Play/Pause/Hold	Shift + Stop /
<</Reveal	<< / Tune-
>>/Size	Zoom / Size
>>/Size	>> / Tune+
Stop/Index	Stop / Hold
I<<	I<< / Preset-
S.Page/>>>I	>>I / Preset+
Text	Text / Goto
FAV	Fav / Marker / PC
Audio	Audio / Lang I/II

Original	Sustituto
DTV	Smart / List
EPG	Guide / EPG / -/-
Tv/Radio	TV/Radio /

