










 



 















 


 
 







 



 
 
 

 
 
 










 


 


 
 

 
 

 




Original	Sustituto	Original	Sustituto
 Power	 Power	 Vol+	 Vol +
 Mute	 Mute	 Vol-	 Vol -
 1	 1	 OK	 Ok
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 Sleep	 Sleep
 9	 9	 Aspect	 Format
 0	 0	 Rec	 Rec
 Recall	 Pre Ch	 Red/DVD-Setup	 Red
 PR.List	 List	 Green/Repeat	 Green
 Source	 AV	 Yellow/Languag	 Yellow
 CH+	 Ch +	 Blue/DVD-Menu	 Blue
 CH-	 Ch -	 Title/PC Auto	 Options

Original	Sustituto	Original	Sustituto
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 FF	 FF	 Stop	 Stop
 II	 II	 Play	 Play
 RR	 RR	 FF	 FF
 DISC NAV	 DISC NAV	 SOUND	 AD
 LIST	 LIST	 SETTINGS	 SETTINGS
 DUAL	 DUAL	 SUBT	 SUBT
 SEARCH	 SEARCH	 OPT	 OPT
 PICTURE	 PICTURE	 ECO	 ECO
 SLEEP	 SLEEP	 3D	 3D
 TV/R	 TV/R	 FORMAT	 FORMAT
 FORMAT	 FORMAT	 TIMER	 TIMER
 E-MANUAL	 E-MANUAL	 AV	 AV
 REPEAT	 REPEAT	 D.MENU	 D.MENU
 ZOOM	 ZOOM	 DISPLAY	 DISPLAY
 TEXT	 TEXT	 MENU	 MENU
 TOP MENU	 TOP MENU	 INFO	 INFO
 CLEAR	 CLEAR	 OK	 OK
 EXIT	 EXIT	 RETURN	 RETURN
 HOME	 HOME	 BACK	 BACK
 SMART	 SMART	 VOL+	 VOL+
 APP	 APP	 CH+	 CH+
 MEDIA	 MEDIA	 VOL-	 VOL-
 CH-	 CH-	 1	 1
 1	 1	 2	 2
 2	 2	 3	 3
 3	 3	 4	 4
 4	 4	 5	 5
 5	 5	 6	 6
 6	 6	 7	 7
 7	 7	 8	 8
 8	 8	 9	 9
 9	 9	 0	 0
 0	 0	 GUIDE	 GUIDE
 GUIDE	 GUIDE	 PRE-CH	 PRE-CH
 PRE-CH	 PRE-CH	 A	 A
 A	 A	 B	 B
 B	 B	 C	 C
 C	 C	 D	 D
 D	 D		
