











 
 


 
 
 
 







 










Original	Sustituto
 Power	 Power
 Energy/Saving	 3D
 AV Mode	 Media
 Input	 AV
 Tv/Radio	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List
 Q.View	 Sleep

Original	Sustituto
 FAV/Mark	 Pre Ch
 Ratio	 Format
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 PR+	 Ch +
 PR-	 Ch -
 Menu	 Menu
 Guide	 Guide
 Q.Menu	 D. Menu
 Back	 Back
 Info	 Info
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original	Sustituto	Original	Sustituto
OK	Ok		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
Text	Text		
T.Opt	Options		
Subtitle	Subt		
Stop	Stop		
Play	Play		
Pause	Pause		
<<	<<		
>>	>>		
Simplink	Smart		

