
 

 

 

 







| Original | Sustituto | Original | Sustituto |
|--|--|--|---|
|  Power |  Power |  Info |  Info / Angle |
|  Open/Close |  Eject / Surround |  Pause |  Pause / Step / Freeze |
|  DVD |  2 |  TV CH+ |  CH+ / Page+ |
|  USB |  8 |  >> |  >> / Tune+ |
|  HDMI Sel. |  0 |  Tv Vol- |  Vol- |
|  Marker |  Fav / Marker / PC |  I<< |  I<< / Preset- |
|  EZ View |  Display / Media |  Stop |  Stop / Hold |
|  Video Sel. |  4 |  Play |  Play / Slow |
|  Repeat |  Green / APP / Repeat |  >>I |  >>I / Preset+ |
|  A-B Repeat |  Yellow / YouTube / Repeat |  TV CH- |  CH- / Page- |
|  Subtitle |  Subtitle / EQ |  Menu |  Menu / Home |
|  Disc Menu |  D.Menu / Top |  Up |  Up |
|  Title Menu |  Smart / List |  Return |  Back / Return |
|  Tv Source |  AV / Input / RDS |  Left |  Left |
|  Audio |  Audio / Lang I/II |  Enter |  OK |
|  Tv Vol+ |  Vol+ |  Right |  Right |
|  << |  << / Tune- |  Tools |  Setup / OPT / |



