




Original	Sustituto
 Power	 Power
 Eject	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 X/SHUFFLE	 AV / Input / RDS
 0	 0
 Repeat	 Shift + Green / APP / REPEAT
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Vol+	 Vol+

Original	Sustituto
 Menu	 Menu / Home
 Home	 Shift + Menu /
 Back	 Back / Return
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 Info	 Info / Angle
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+
 I<< / Preset-	 I<< / Preset-
 >>I / Preset+	 >>I / Preset+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Sustituto
 EPG	 Guide / EPG / -/--
 TXT	 Text / Goto
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Setup	 Setup / OPT /
 Tv Sys.	 TV/Radio /
 Audio	 Audio / Lang I/II
 Subt.	 Subtitle / EQ
 → /Goto	 Shift + Right
 >/Slow	 Shift + Play /
 Angle	 Shift + Info / Angle
 Zoom	 Zoom / Size
 Rec	 Rec / Rec Mode
 Edit	 D.Menu / Top
 Copy	 Picture / Format
 Timeshift	 Sleep / Timer

Original	Sustituto

