 



 









 




 


 
 

 
 
 

 

 

 

































Original	Sustituto	Original	Sustituto
 Power	 Power	 Up/CH+	 Up
 Mute	 Mute / Dimmer	 Info	 Info / Angle
 Play	 Play / Slow	 Left/Vol-	 Left
 Pause	 Pause / Step / Freeze	 OK	 OK
 Stop	 Stop / Hold	 Right/Vol+	 Right
 Rec	 Rec / Rec Mode	 Exit	 Exit / Cancel / Clear
 <<	 << / Tune-	 Down/CH-	 Down
 >>	 >> / Tune+	 ←	 Back / Return
 I<<	 I<< / Preset-	 Vol+	 Vol+
 >>I	 >>I / Preset+	 List	 Smart / List
 S-T	 Sound / Title	 Prog+	 CH+ / Page+
 Audio	 Audio / Lang I/II	 Vol-	 Vol-
 3D	 Picture / Format	 Prog-	 CH- / Page-
 Timer	 Sleep / Timer	 1	 1
 TV/R	 TV/Radio /	 2	 2
 TXT	 Text / Goto	 3	 3
 Menu	 Menu / Home	 4	 4





Original		Sustituto		Original		Sustituto	
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	EPG		Guide / EPG / --				
	0		0				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

