





 



























 





 

 

 







 





 













Original	Sustituto	Original	Sustituto
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	S		Setup / OPT /
	0		0
	Source		AV / Input / RDS
	Menu/Menu		Menu / Home
	Guide		Guide / EPG / -/--
	Tv/Fav/Radio		TV/Radio /
	Exit/Back		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	PR+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	PR-		CH- / Page-
	[[+]		Smart / List
	→[/] ←		Display / Media
	[i+]		Info / Angle
	Text		Text / Goto
	>/[▼]		Shift + >> /
	Play/O /II		Play / Slow
	<</[≡0]		<< / Tune-











 









 













 




 








 





 
 
 

 





 

 





Original	Sustituto
>>/Subtitle	>> / Tune+
Open/close/[=?]	Eject / Surround
Stop/[=+]]	Stop / Hold
I<</[=±]	I<< / Preset-
>>I/[=x]/[O]	>>I / Preset+
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Sustituto



 





 

 















 





 










 
 
 
 

 

 




 
 

 





Original	Sustituto	Original	Sustituto
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	_ Menu/DVD		Menu / Home
	- Exit/Back		Exit / Cancel / Clear
	- Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol-		Vol-
	Vol+		Vol+
	Pause / Step / Freeze		Pause / Step / Freeze
	▶ / I/II		Shift + Play /
	▶ / I/II		Play / Slow
	<< / [≡⏪]		<< / Tune-
	<< / [≡⏪]		Shift + << /
	>> / Subtitle		Shift + >> /
	>> / Subtitle		>> / Tune+
	▲		Eject / Surround
	■ / [≡⏸]		Stop / Hold
	I<<< / [≡⏮]		I<<< / Preset-
	I<<< / [≡⏮]		Shift + I<<< / Preset-
	>>> / [⏭≡]		Shift + >>> / Preset+
	>>> / [⏭≡]		>>> / Preset+





Original	Sustituto	Original	Sustituto
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	- 7		7
	- 8		8
	- 9		9
	0		0
	Source		AV / Input / RDS
	P+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	P-		CH- / Page-
	Pause / Step / Freeze		Pause / Step / Freeze
	Shift + Play /		Shift + Play /
	Play / Slow		Play / Slow
	<< / Tune-		<< / Tune-
	Shift + << /		Shift + << /
	Shift + >> /		Shift + >> /
	>> / Tune+		>> / Tune+
	Eject / Surround		Eject / Surround
	Stop / Hold		Stop / Hold
	Shift + I<< / Preset-		Shift + I<< / Preset-
	I<< / Preset-		I<< / Preset-
	Shift + >>I / Preset+		Shift + >>I / Preset+
	>>I / Preset+		>>I / Preset+

