



































 







 

 

 
 







Original	Sustituto
 Power	 Power
 Auto	 Smart / List
 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 I/II/Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0





Original	Sustituto
 Back	 Back / Return
 Sleep	 Sleep / Timer
 Aspect	 Shift + Picture / Format
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Red/Eject	 Eject / Surround
 Red/Eject	 Red / Netflix / Search
 Green/D.Menu	 D.Menu / Top
 Green/D.Menu	 Green / APP / Repeat
 Yellow/Setup	 Yellow / YouTube / Repeat
 Yellow/Setup	 Setup / OPT /
 Blue/D.Disp	 Blue / Prime Video / Random
 Display	 Display / Media





Original	Sustituto
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Vol+	 Vol+
 Media	 Shift + Display / Media
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Rec	 Rec / Rec Mode
 CH-	 CH- / Page-
 EPG	 Guide / EPG / -/--
 FAV	 Fav / Marker / PC
 Subtitle	 Subtitle / EQ
 Tv/Radio	 TV/Radio /
 Play	 Play / Slow
 Text	 Text / Goto
 Stop/Index	 Stop / Hold
 A-B	 Shift + Yellow / YouTube /
 <</Hold	 Shift + Stop /

Hold

Original	Sustituto
 <</Hold	 << / Tune-
 >>/Subpage	 >> / Tune+
 Repeat/Repeat	 Shift + Green / APP /
 I<</Size	 Zoom / Size
 I<</Size	 I<< / Preset-
 >>I/Cancel	 Shift + Exit / Cancel / Clear
 >>I/Cancel	 >>I / Preset+

