

 

 
 
 



 

 

 

 

 

 
 
 



 
 
 
 
 
 





 
 

 

 
 
 
 

 


 
 



 
 















Original	Sustituto	Original	Sustituto
	Power		Power
	HDMI/Control		Smart
	Rec		Rec
	Stop		Stop
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	l<<		l<<
	>>l		>>l
	Red/Zoom/↑ ↓		Red
	Green/Repeat/↓		Green
	Yellow/Root		Yellow
	Blue/Title		Blue
	Screen		Format
	Lang		Dual
	Subtitle		Subt
	Internet/PIP		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Info		Info
	Source		AV
	OK		Ok
	Up		Up
	Down		Down





Original		Sustituto		Original		Sustituto	
	Right		Right				
	Left		Left				
	P+		Ch +				
	P-		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				
	Menu		Menu				
	Mute		Mute				
	Return		Back				
	Swap		Pre Ch				
	FAV		Shift + Pre Ch				
	EPG		Guide				
	Sleep		Sleep				
	Search Mode		Shift + AV				
	Ball/Angle		Options				
	Display		Shift + Info				
	Presets		TV/R				

