 



 

 
 
 
 


 
 



 
 




 
 


 

 



 





 





 

 


 
 








 
 










Original	Sustituto	Original	Sustituto
 Power	 Power	 Favorite	 Shift + Pre Ch
 Mute	 Mute	 Play	 Play
 Subtitle	 Subt	 Pause	 Pause
 <<	 <<	 Stop	 Stop
 >>	 >>	 Info	 Info
 I<<	 I<<	 1	 1
 >>I	 >>I	 2	 2
 Record	 Rec	 3	 3
 Up	 Up	 4	 4
 CH+	 Ch +	 5	 5
 CH-	 Ch -	 6	 6
 Down	 Down	 7	 7
 Right	 Right	 8	 8
 Vol+	 Vol +	 9	 9
 Vol-	 Vol -	 0	 0
 Left	 Left	 EPG	 Guide
 OK	 Ok	 Tv/Radio	 TV/R





Original	Sustituto	Original	Sustituto
 Audio	 Dual		
 Recall	 Pre Ch		
 Repeat	 Shift + Text		
 Teletext	 Text		
 File	 Smart		
 Device	 AV		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Menu	 Menu		
 Exit	 Exit		

