 

 
 


 
 
 
 


 
 


 



 
 


 

 

 
 


 
 


 
 
 

 
 


 
 
 

 
 


 



 
 
 





 





 
 





Original	Sustituto	Original	Sustituto
 Power	 Power	 >>	 >>
 Open/Close	 Eject	 <<	 <<
 1	 1	 >>	 >>
 2	 2	  <<	  <<
 3	 3	 Disc Menu	 D. Menu
 4	 4	 Info/Menu	 Info
 5	 5	 Back	 Back
 6	 6	 Home	 Smart
 7	 7	 Title/Popup	 Options
 8	 8	 Enter	 Ok
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 Clear	 Exit	 Right	 Right
 Repeat	 Text	 Left	 Left
 Play	 Play	 Red	 Red
 Stop	 Stop	 Green	 Green
 Pause	 Pause	 Yellow	 Yellow





Original	Sustituto	Original	Sustituto
 Blue	 Blue		
 Power Tv	 Shift + Power		
 Input Tv	 AV		
 Vol-	 Vol -		
 Vol+	 Vol +		

